



ZEISS
innovation!

ZEISS Secacam 5 & 7



zeiss.com/trailcam



Seeing beyond

TRAIL CAMERAS FROM ZEISS

IN NATURE WITH JUST ONE CLICK.

Our environment is full of surprises. Many of them occur without us being able to notice them. Particularly the animal world proves to be most alive where humans aren't present. This is where a fascinating world reveals itself, where shy critters and nocturnal creatures lead their mysterious existence.

With their detailed and high-contrast images, ZEISS trail cameras give you a glimpse into these hidden worlds. Whether placed in the forest or your own backyard, thanks to their wireless capabilities you can rediscover nature from anywhere – even at night and in bad weather.

In addition to just observing individual animals, the cameras also help you better understand a habitat. This is because the recordings allow you to learn about and continuously monitor the animals' behavior, the size of the population, and how they use the area – all in extremely high image quality during the day and at night.



Daytime shot



Nighttime shot

Privacy notice

Before using your ZEISS Secacam, please review the relevant privacy and data protection regulations in your country and ensure that you comply with local laws in this regard. You can find information on privacy and data protection as well as how we process personal data in our download center: zeiss.com/cop/downloads

In addition, the ZEISS Privacy Policy applies: zeiss.com/data-protection

Key features of ZEISS trail cameras at a glance:

**BEST-IN-CLASS IMAGE
QUALITY** DURING THE
DAY AND AT NIGHT

READY TO USE
IN JUST A FEW MINUTES

EXTENSIVE **NETWORK
COVERAGE IN
EUROPE***

*In over 35 countries including Switzerland, Norway, and the UK.
Complete list: zeiss.com/trailcam

RELIABLE
APP CONNECTIVITY

TRAIL CAMERAS FROM ZEISS

IN NATURE. ANYTIME. EVERYWHERE.

RRP
€279

ZEISS Secacam 7
The professional observer.

The photos are processed quickly in high quality, saved, and therefore transmitted faster. The ability to easily mount the camera and make adjustments provides additional benefits.

A ZEISS Secacam 5 camera is mounted on a tree trunk. The camera is a compact, rugged device with a lens in the center and a small display screen above it. It is attached to the tree with a blue fabric strap. A telescope is mounted on top of the camera, pointing upwards. The background is a lush green forest with sunlight filtering through the leaves.

RRP
€229

**ZEISS Secacam 5:
The compact observer.**

Thanks to its low weight, it can be transported more easily and used in a flexible manner – even mounted to smaller objects.



**CAPTURE MOMENTS WITH PRECISION.
WITH A PRACTICAL FRONT DISPLAY.**

ZEISS SECACAM 7

Even less experienced users can use the **ZEISS Secacam 7** easily and without **any difficulty** – since the lens of this trail camera permanently faces forward independent of the front flap, you can check the coverage area on the display and adjust the camera perfectly. Once mounted, the camera will provide images of unparalleled quality in a matter of seconds.

NATURE IN PERFECT VIEW.

Excellent image quality – even at night

With the help of 60 black LEDs and an extremely light-sensitive photo sensor, our trail cameras are able to capture sharp, extremely well-illuminated photos and videos, even in complete darkness.



Easy mounting

The lens is positioned above the front flap so that you can check the area you want to monitor live on the display when mounting the camera. This makes it much easier to find the perfect position for the trail camera.



Simple maintenance

Low-power data processing ensures that the camera can remain in use for a long time. And when the batteries do run out, you can replace them quickly and easily thanks to the battery magazine.





INCONSPICUOUS OBSERVATION. THANKS TO ITS COMPACT SIZE. ZEISS SECACAM 5

Observe wildlife in its most undisturbed form – the ZEISS Secacam 5 is barely noticeable due to its small size and optimized camouflage, so it effortlessly evades prying eyes. Its compact design and light weight allow you to mount the camera in confined spaces, trees, bushes, or other inaccessible places. This allows it to be used in a variety of different terrains and habitats.

AT ONE WITH NATURE.



Extensive network coverage

The built-in multi-roaming SIM card offers a more reliable connection, even in areas with poor cellular coverage, so you won't miss a thing.



20% lighter than the ZEISS Secacam 7

Smart lighting control

The highly sensitive motion sensor precisely detects animals' movements. When recording, the trail camera automatically adjusts the intensity of the flash, which is invisible to animals and humans. This avoids incorrectly exposed images and minimizes energy consumption.



Rugged housing in ZEISS camouflage look

The trail camera's rugged, IP 66-rated housing can withstand even the harshest conditions. In addition, the one-of-a-kind ZEISS all-over camouflage ensures that the camera remains undetected from all angles.



PERFECTLY CONNECTED. THANKS TO SECURE IMAGE TRANSFER VIA APP.

ZEISS SECACAM 5 & 7

No matter where you are, the ZEISS Secacams 5 & 7 will reliably and quickly alert you to new sightings thanks to stable image transfer – and always with ZEISS' best-in-class image quality.

View the latest happenings in the forest directly on your smartphone via the dedicated app for Android and iOS. It combines excellent image quality with fast data transfer. This is made possible by the use of the fast 4G network as well as state-of-the-art image compression – the recordings are compressed into incredibly small files that nevertheless boast a high resolution of 1,920 x 1,440 px maximum and reveal every detail.

We offer attractive and fair pricing models for the ZEISS Secacams 5 & 7. You can choose between a prepaid service and different service plans, which you can cancel unconditionally on a monthly basis. Prepaid credit packages are also available to top-up your existing subscription plan. Multiple cameras can access purchased credits as these are pooled for each user account.

ZEISS Service Plans ⁽¹⁾	Prepaid Service	Most popular!		
		Basic Plan (Price per month)	Premium Plan (Price per month)	Professional Plan (Price per month)
Monthly subscription (per camera)	–	€ 2.99	€ 9.99	€ 14.99
Annual subscription (per camera)	–	€ 2.39	€ 7.99	€ 11.99
HD pictures included ⁽²⁾	See credits below	100	750	unlimited
Videos included ⁽³⁾	–	–	25	50
From the 4th camera onwards, 30 % discount on subscriptions for all cameras	Learn more: www.zeiss.ly/secacam-multi-camera-plan			
Remote camera control	–	included	included	included
Cloud storage time ⁽⁴⁾	2 months	2 months	6 months	12 months
Animal recognition ⁽⁵⁾	–	–	included	included
Anti Theft Service ⁽⁶⁾	–	–	–	included
Free Premium Plan ⁽⁷⁾	90 days free!			

Save 20%

Prepaid Service/Top-Up Options (1 HD picture = 1 credit / 10 sec video = 4 credits ⁽⁸⁾)

100 credits	€ 1.99
500 credits	€ 8.99
1,000 credits	€ 16.99
5,000 credits	€ 74.99

All prices include VAT.

For more information:
zeiss.com/trailcam/subscription



(1) Service plans and feature availability are subject to change. Status: October 2023.

(2) Standard image size when transmitting corresponds to 1,280 x 960 pixels. Full HD transmission (1,920 x 1,440 pixels) is possible at any time without extra charge.

(3) Videos not included with Prepaid Service. Videos (848 x 480 pixels) are limited to 10 seconds.

(4) Images are always additionally stored on the internal SD card.

(5) Software features are subject to constant improvement and subject to change.

(6) 80 % price reduction on current device RRP if stolen. For more details please visit: zeiss.ly/secacam-theft-replacement

(7) Visit the ZEISS Secacam Shop at shop.zeiss.com and get a premium plan for 90 days FREE. The trial period starts when you register your first ZEISS Secacam.


Please note the current terms and conditions. Subject to change without notice. Further information at: zeiss.ly/secacam-90days

(8) Credit use for video only available with Premium and Professional Plan.

App features

The ZEISS Secacam app not only lets you manage your trail camera, but also share it with your contacts.


You can also check camera status data like the battery level at any time, check the location of the camera on a map, or view your best shots in the gallery.

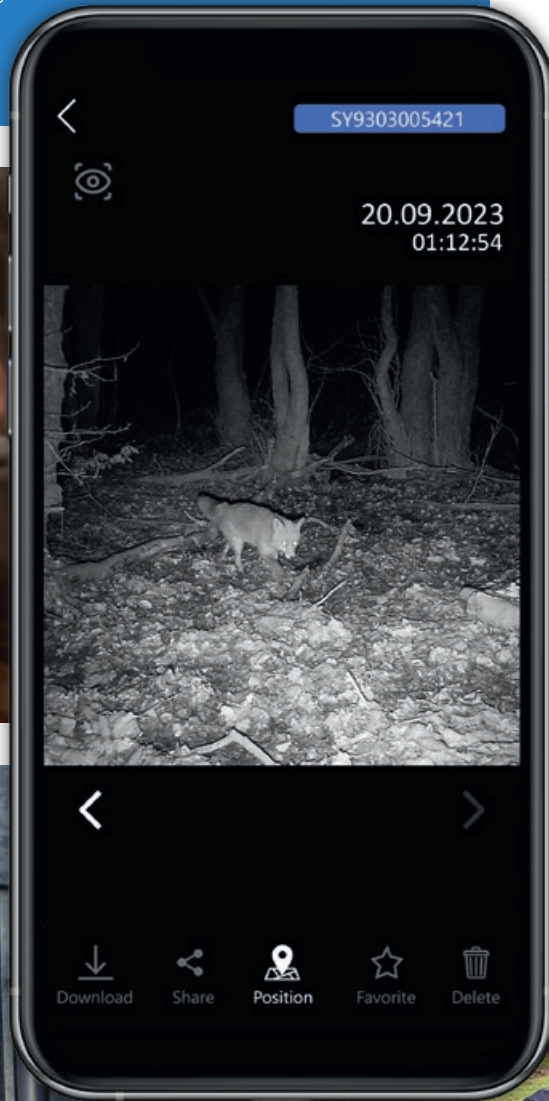

ZEISS SIM card

The ZEISS Secacams 5 & 7 use a built-in multi-roaming SIM card. This allows you to connect to the best available network in Europe*. In the process, you do not incur any roaming charges.

*In over 35 countries including Switzerland, Norway, and the UK. Complete list: zeiss.com/trailcam

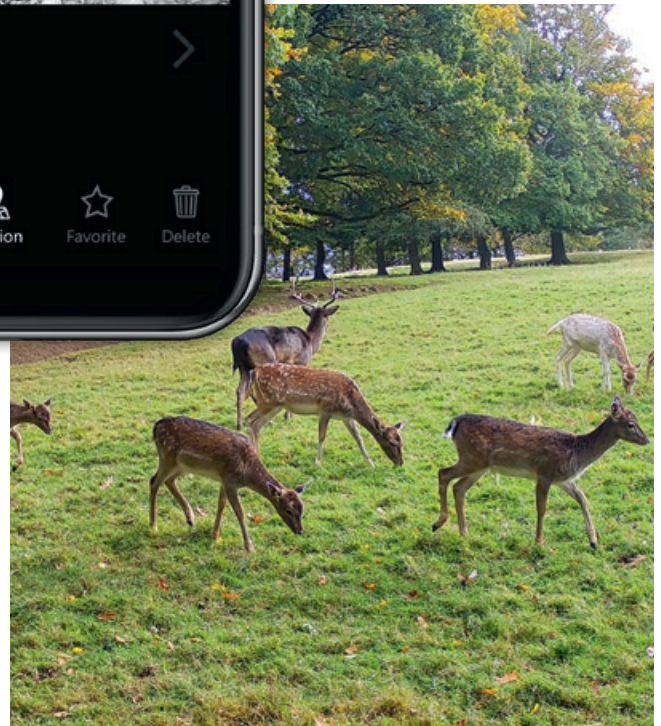

MAXIMUM DETAIL RECOGNITION DURING THE DAY AND AT NIGHT. THANKS TO ZEISS QUALITY.

Delivering clear, vibrant images during an eclipse or in low-light conditions is a significant challenge for cameras of all types. But with the ZEISS Secacams 5 & 7, you can see every movement in the field in greater detail and contrast than ever before, thanks to the ZEISS image quality you've come to expect – whether during the day or at night.



Night shot as an infrared image

Thanks to perfectly compatible technology, the ZEISS Secacams 5 & 7 offer outstanding imaging quality – even in low-light conditions in dark areas. In this context, the high-sensitivity motion sensor is always alert to trigger the infrared flash of the 60 black LEDs when motion is detected. While the flash is invisible to the animal, the light-sensitive photo sensor strikes, capturing the illuminated scene along with the animal. This gives you the unique opportunity to observe the animals' habitat unnoticed, both during the day in full, vibrant color and at night in the form of an infrared image.

This is what makes the image quality of the ZEISS Secacams 5 & 7 stand out:

- Improved night imaging for even better detail recognition from a distance
- Faster shutter speeds at night for sharp images of moving objects
- Optimized images in daylight for even better detail recognition

OPTICAL EXPERTISE

Lenses in renowned ZEISS quality

The ZEISS brand is synonymous with reliable product quality and innovation. We develop, manufacture, and distribute products of the highest quality for our customers. To ensure and maintain a high standard of quality, we continuously monitor and improve ZEISS product features.



ALWAYS UP TO DATE. THANKS TO ADDITIONAL SERVICES.

Far more than standard

The ZEISS Secacams 5 & 7 not only allow you to capture and send images, but also benefit from numerous additional services.

The trail cameras from ZEISS give you an unparalleled view of nature and offer a wide range of services:

The camera status can be viewed at any time in the corresponding app, allowing you to immediately respond to a decreasing battery level, for example. If you have purchased a service package, you can modify settings or create schedules on your trail camera via the app. This ensures that your needs are fully met.

Built to withstand the elements

Tougher than the harshest conditions – with the ZEISS Secacams 5 & 7, you’ll know what’s going on outside even in the worst weather and visibility conditions.

ZEISS trail cameras demonstrate their best-in-class quality particularly in the toughest weather conditions – the high-precision seal protects the trail cameras from water and the rugged housing even withstands pouring rain and hail. Even heat and snowfall won’t affect the functionality of the trail cameras. This ability to withstand extreme conditions makes ZEISS Secacams a faithful companion in the forest.

ZEISS IN THE FIELD



Featuring an IP66-rated housing

The trail cameras were equipped with IP66 ingress protection. This means they are designed for outdoor use and have a weatherproof housing. As a result, they are protected from pouring rain and small particles of dirt and can withstand the most adverse environmental conditions at all times.

RAPID MOUNTING. THANKS TO PLUG-AND-PLAY INSTALLATION.

Installing the ZEISS Secacams 5 & 7 doesn't require technical expertise nor a lot of time.




Mount

Simply mount the trail camera to its location using a strap, cable lock, or tripod thread (not included) and start monitoring right away thanks to plug-and-play functionality. This is because the batteries, SD card, and SIM card are already installed.



Turn on

The ZEISS Secacams 5 & 7 are easy to operate even without extensive technical knowledge – their intelligent default settings are already perfect for most applications. If you do want to change something, however, the large color display and the backlit keys make it easy.

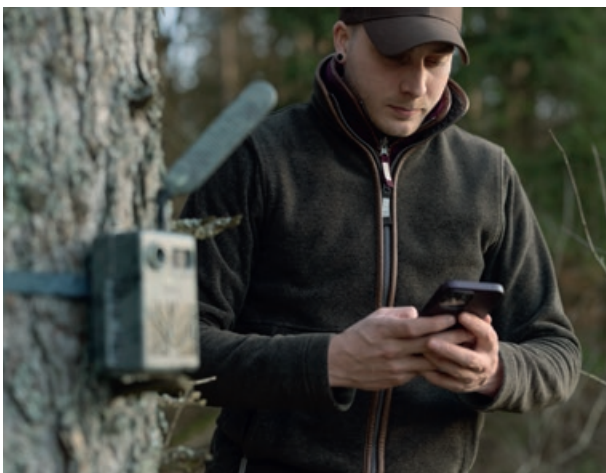

Connect

Use the ZEISS Secacam app to finish setting up your trail camera and manage it. Simply enter the activation code that comes with the camera into the app to connect the two. Now you're ready to observe nature with the highest image quality.

TECHNICAL SPECIFICATIONS.

Model	Trail camera	
	ZEISS Secacam 5	ZEISS Secacam 7
Optics		
Field of view	60°	
Number of LEDs/type of flash	60 × black LED (940 nm)	
Flash range	~30 m	
Response time	< 0.35 ~ 0.45 seconds	
Sensor		
Sensor type	CMOS sensor	
Sensor resolution	5 MP (12 MP interpolated)	
Sensor range	Up to 25 m depending on object size and temperature difference	
Display		
Display size	50 × 40 mm	
Display type	2.4" TFT-LCD color display	
Electronic components		
Ports	USB-C	
Power supply	8 batteries/rechargeable type LR6 (AA)	
Battery compartment	Hinged compartment	Magazine
Voltage	12.5 V – 8.5 V	
Storage capability	SD or SDHC memory card up to 32 GB	
Resolution of transmitted photos	1,920 × 1,440 px	
Cellular network (multi-net SIM)	LTE (4G)	
Transfer protocol	HTTPS	
Location reporting	GPS (when turning on the device)	
Connection to other devices	ZEISS Secacam App/USB	
General		
Ingress protection rating	IP 66	
Operating temperature range	-20°C / +55°C (-4°F / +131°F)	
Dimensions (height × width × depth)	130 mm × 100 mm × 70 mm	143 mm × 120 mm × 75 mm
Weight	320 g	440 g
Order number	527730	527740

Subject to changes in design and scope of delivery as a result of ongoing technical development.

ACCESSORIES

Functional add-ons

Want to get even more out of your trail camera? If so, we'll have more accessories for you soon.

We'll keep you updated at zeiss.com/trailcam. But there's one thing we can reveal now: you're in for a treat!

Customer Care

ZEISS SECACAM

carried out by Ventrade GmbH

Schanzenstraße 38, 51063 Köln

Germany

Phone United Kingdom: +44 (0) 1223 401 500

Phone International: +49 (0) 7364 2022 067

E-Mail: consumerproducts@zeiss.com

Carl Zeiss AG

Consumer Products Business Group

Carl-Zeiss-Straße 22

73447 Oberkochen

Germany

zeiss.com/trailcam

